

51 21 140 Removing and installing/replacing complete lock cylinder

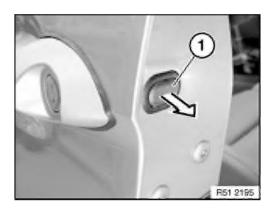


Remove plate (1).

Installation:

Fit new plate (1).

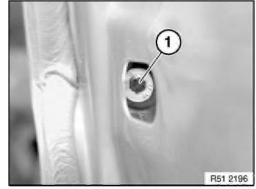


Release screw (1).

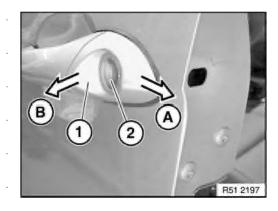


Removing cover (1) on outside handle:

- A Pull cover (1) approx. 1 ... 2 mm towards rear.
- B Detach cover (1) with lock barrel (2) towards outside.

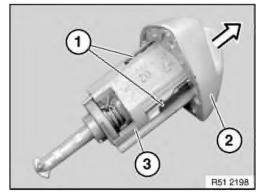

 
Remove catches (1) and detach cover (2) from lock cylinder (3).




Installation:

Catches (1) on cover (2) must not be damaged.

 B Lock cylinder



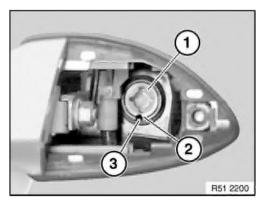

Installation:

Notch (2) on paddle support (1) must be secured in catch (3).

Only in this position will installation of the lock barrel be guaranteed.